

Classroom Technology

Blue Bell
Pottstown

Parkhouse Classrooms

Montgomery County Community College

Power up the SMART Board



Turn on the Projector and Smartboard

Press the On button on the Extron console. The projector will warm up and turn on within a minute. To turn the SMART Board off, press the Off button.


Source

Select PC to use the classroom PC or select DVD, VCR, or laptop.

Volume Control knob

Used to adjust the output of the projector's built-in audio amplifier. An on-screen display will show the volume setting.

Orienting the SMART Board

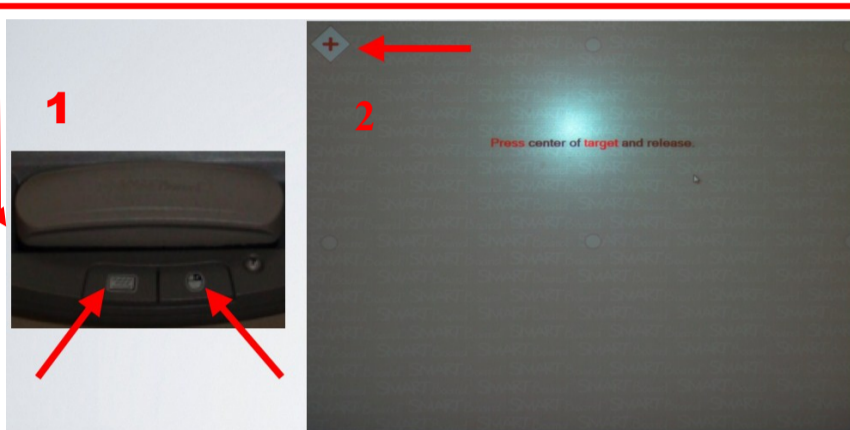

1. On the Smartboard, simultaneously press and hold down the keyboard and mouse buttons for a few seconds.
2. Follow the on-screen instructions by pressing the center of the target from one location to the next.



To turn on the PC or DVD Player

Open the cabinet under the instructor podium






If you are playing a DVD or VHS tape, turn on the DVD/VCR Combo player.

Press the power button on the front of the PC in the cabinet as shown above.

Using a Laptop

To use your laptop, open the cable cubby on the instructor podium.

	Plug the VGA cable into the VGA connection on your laptop.
	Plug in the USB cable into a USB port to get control of the mouse and keyboard.
	Plug in the audio cable into the outlet on your laptop to have the sound broadcast over the speakers in the classroom.
	Be sure that "Laptop" is selected as Source on console on the instructor podium.

Troubleshooting Problems with the SMART Board

Problem:	Solution:
Nothing is displayed on the Smartboard <ul style="list-style-type: none"> • Light on projector is red: • Light on projector is green: • Light on projector is off: 	<ul style="list-style-type: none"> • Press the On Button on the Extron console • Select source on Extron Console again • The projector may be off. Check the main power button on the back of the projector (if this cannot be reached, call the Help Desk at x6495 for assistance.)
Image only displays on half of smartboard	Select source again
VCR/DVD output is not displayed on SmartBoard	Select "VCR" or "DVD" on the Extron console
Smartboard is not aligned	Follow the instructions above to orient the SmartBoard
Smartboard does not respond to touch	Restart the computer
Laptop is connected but is not displaying on Smartboard	<ul style="list-style-type: none"> • First select "laptop" from source again • If not successful, then power off the laptop, connect the cables from the cable cubby, then turn on laptop

For additional information or assistance, please contact the Technical Help Desk at x6495.

This document can be accessed and printed via the MyMC3 portal > IT Help Desk and Updates > Documentation > Classroom Documentation